

3/8" Dr. Bit Socket, Tamper-Proof Torx®

3/8"



Corresponding Spec. marked with *



- Bit made from S2 material for durability and anti-slipping
- Bit with tamper suitable for professional Torx® screws

No.	Spec.	L(mm)			
22601	T-45	48	6	-	-
22602	T-50	48	6	-	-
22603*	T-55	48	6	-	-
22604*	T-60	48	6	-	-

▲ These bit sockets should never be used on power drivers, pneumatic impact wrench and/or extenders.

1/2" Dr. Bit Socket, 50mm Length, Torx®

1/2"



Corresponding Spec. marked with *



- Bit made from S2 material for durability and anti-slipping

No.	Spec.	L(mm)			
24101	T-20	55	6	-	-
24102	T-25	55	6	-	-
24103	T-27	55	6	-	-
24104	T-30	55	6	-	-
24105	T-40	55	6	-	-
24106	T-45	55	6	-	-
24107	T-50	55	6	-	-
24108*	T-55	55	6	-	-
24109*	T-60	55	6	-	-


▲ These bit sockets should never be used on power drivers, pneumatic impact wrench and/or extenders.

1/2" Dr. Bit Socket, 50mm Length, Hexagon

1/2"



Corresponding Spec. marked with *

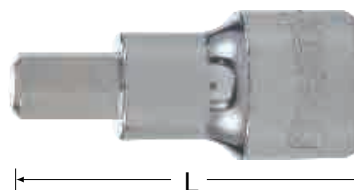

- Bit made from S2 material for durability and anti-slipping

No.	Spec. (mm)	L(mm)			
24201	4	55	6	-	-
24202	5	55	6	-	-
24203	6	55	6	-	-
24204	7	55	6	-	-
24205	8	55	6	-	-
24206	10	55	6	-	-
24207*	12	55	6	-	-
24208*	14	55	6	-	-
24209*	17	55	6	-	-

▲ These bit sockets should never be used on power drivers, pneumatic impact wrench and/or extenders.

1/2" Dr. Bit Socket, Hexagon

1/2"



- Used for auto repair (Volkswagen, Audi, GM, etc.)
- Bit made from S2 material for durability and anti-slipping

No.	Spec. (mm)	L(mm)			
24301	6	70	6	-	-
24302	8	120	6	-	-
24303	6	250	6	-	-
24304	5	180	6	-	-
24305	6	140	6	-	-
24306	10	140	6	-	-

▲ These bit sockets should never be used on power drivers, pneumatic impact wrench and/or extenders.